

# L96 / TYPE 96 TRIGGER MARUZEN Ver. INSTRUCTION MANUAL

JA-4727

**PREPARATION COMPONENT PARTS**

Trigger box cover ×1    Trigger box ×1    Trigger sear ×1    Piston sear ×1    Trigger ×1    Set pin U ×1

3×18 Metal pin ×4    Piston sear spring A ×1    Piston sear spring B ×1    Trigger spring ×1    Compression spring ×1

3×5 Allen screw ×2    4×8 Allen screw ×1    Phillips screw flat head ×4    Hex socket head cap screw ×2    Phillips screw round head ×2

1.5mm HEX wrench ×1  
2.0mm HEX wrench ×1  
2.5mm HEX wrench ×1

**STEP 1 3×18 METAL PINS**

**STEP 2 PISTON SEAR**

Piston sear spring B

Piston sear spring A

Notice the spring position

**STEP 3 TRIGGER & TRIGGER SEAR**

Trigger spring

Compression spring

**STEP 4 TRIGGER BOX COVER & ADJUST SCREW**

4×8 Allen screw

Notice the allen screw direction

3×5 Allen screw

3×5 Allen screw for adjust trigger

Phillips screw flat head

**STEP 5 SET PIN U**

Compatible with the original safety