JA-5012 Mini Reddot Light Sensor
Manual Guide

JJ AIRSOFT

Elevation adjuster

Thrust and clamp screws
to fix red dot position

Windage adjuster

Brightness sensor

CR2032
button cell
battery

−

+
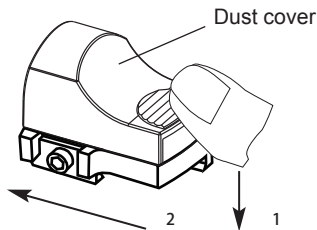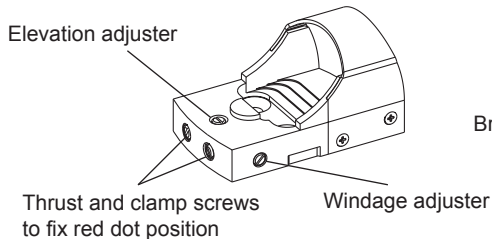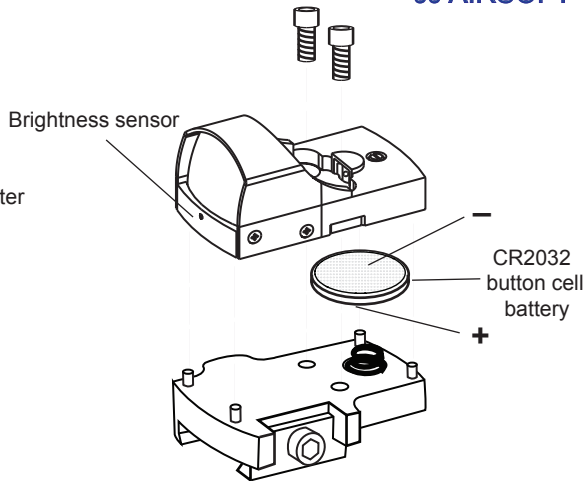
Dust cover

2   1

To save battery life, cover the device after use.

Remove battery when not in use
for extended period.